

# Lewatit® S 5221 – Food-quality Ion Exchange Resin for Anion Removal

Lewatit® S 5221 is a Food-grade, macroporous, weakly basic anion exchange resin based on a cross-linked poly acrylate. Lewatit® S 5221 combines good physical stability and excellent resistance to mechanical osmotic shocks with exceptionally high total capacity. It is suitable for use in cocurrent and countercurrent systems (e.g., Lewatit® WS system/fluidized bed). Lewatit® S 5221 in the free base form is suitable for removal of, e.g., sulfate ions of organic products such as lactic acid, citric acid, etc.

## **Applications**

- Removal of anions from organic acid, e.g., sulfate removal
- Milk whey demineralization in combination with weak acid cation like Lewatit® S 8528 and strong acid cation such as Lewatit® S 2568
- Gelatin demineralization in combination with strong acid cation like Lewatit® S 1668 or Lewatit® S 2568
- Removal of anions from fruit juice and neutralization with high operating capacity and high stability
- Stevia refining

### **Benefits**

- Combines good physical stability and excellent resistance to mechanical osmotic shock with exceptionally high total capacity
- Offers rapid kinetics for common anions, including larger bulky anions, e.g., sulfate
- Has excellent high osmotic stability against organic acids combined with moderate swelling ~25% for free base Cl<sup>-</sup> and 50% for lactic acid
- Offers good regeneration behavior and lower rinse water requirements than common resins of this type
- High fouling resistance compared with resins based on cross-linked polystyrene





#### **Performance**

Lewatit<sup>®</sup> S 5221 has been developed specifically to offer superior lifetime in the removal of sulfate and other anions from organic products such as lactic acid and citric acid.

The high operating capacity and therefore life expectancy of Lewatit® S 5221 for all applications depends on the quality and composition of the water-based food solutions to be treated. We recommend a detailed feed analysis of factors such as ash content, color, viscosity, pH value, and targeted effluent limit as the basis for the selection of the most appropriate demineralization system and resin amount.



Figure 1: >95% perfect beads after 210 cycles of lactic acid; reference sample (without picture) <30% perfect beads after 20 cycles of lactic acid

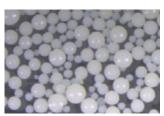


Figure 2: >99% perfect beads after 210 cycles of citric acid; reference sample (without picture) <90% perfect beads after 20 cycles of citric acid

## Standard recommendations

For a typical feed conductivity <500  $\mu$ S a single-pass system with one cation filter/one anion filter and for a feed conductivity >500  $\mu$ S a double-pass system with two-times one cation filter/one anion filter in serial flow is recommended.

- Operation mode: down-flow or up-flow
- Specific flow rate: 2–4 BV/h
- Regeneration NaOH 4%

#### **Specifications**

- Lewatit® S 5221 is manufactured in accordance with Halal, Kosher, and Food Contact Certification requirements. Certificates are available on request.
- If using Lewatit® S 5221 to treat aqueous solutions, special care should be given to the initial cycles of new resin. Please refer to the recommended start-up conditions.

| Test conditions >200 cycles at 50°C |  |
|-------------------------------------|--|
| Citric acid                         | 10 BV 30% citric acid at 20 BV/h down-flow |
| Demi water                          | 10 BV at 20 BV/h up-flow                   |
| Regenerant                          | 10 BV NaOH 4% at 20 BV/h down-flow         |
| Demi water                          | 10 BV at 20 BV/h up-flow                   |
| Lactic acid                         | 10 BV 20% lactic acid at 20 BV/h down-flow |
| Demi water                          | 10 BV at 20 BV/h up-flow                   |
| Regenerant                          | 10 BV NaOH 4% at 20 BV/h down-flow         |
| Demi water                          | 10 BV at 20 BV/h up-flow                   |

## Contact

LANXESS Deutschland GmbH Business Unit Liquid Purification Technologies Kennedyplatz 1 50569 Cologne Germany

Phone: +49 221 8885-0 E-mail: lewatit@lanxess.com

We will be happy to support your business. Please contact us for additional information: visit www.lpt.lanxess.com



Health and Safety Information: Appropriate literature has been assembled which provides information concerning the health and safety precautions that must be observed when handling the LANXESS products mentioned in this publication. For materials mentioned which are not LANXESS products, appropriate industrial hygiene and other safety precautions recommended by their manufacturers should be followed. Before working with any of these products, you must read and become familiar with the available information on their hazards, proper use and handling. This cannot be overemphasized. Information is available in several forms, e.g., material safety data sheets, product information and product labels. Consult your LANXESS representative in Germany or contact the Regulatory Affairs and Product Safety Department of LANXESS Deutschland GmbH or – for business in the USA – the LANXESS Corporation Product Safety and Regulatory Affairs Department in Pittsburgh, PA, USA.

Regulatory Compliance Information: Some of the end uses of the products described in this publication must comply with applicable regulations, such as the FDA, BIR, NSF, USDA, and CPSC. If you have any questions on the regulatory status of these products, contact – for business in the USA-, the LANXESS Corporation Regulatory Affairs and Product Safety Department in Pittsburgh, PA, USA or for business outside US the Regulatory Affairs and Product Safety Department of LANXESS Deutschland GmbH in Germany. The manner in which you use and the purpose to which you put and utilize our products, technical assistance and information (whether verbal, written or by way of production evaluations), including any suggested formulations and recommendations are beyond our control. Therefore, it is imperative that you test our products, technical assistance and information to determine to your own satisfaction whether they are suitable for your intended uses and applications. This application-specific analysis must at least include testing to determine suitability from a technical as well as health, safety, and environmental standpoint. Such testing has not necessarily been done by us. Unless we otherwise agree in writing, all products are sold strictly pursuant to the terms of our standard conditions of sale. All information and technical assistance is given without warranty or guarantee and is subject to change without notice. It is expressly understood and agreed that you assume and hereby expressly release us from all liability, in tort, contract or otherwise, incurred in connection with the use of our products, technical assistance, and information. Any statement or recommendation not contained herein is unauthorized and shall not bind us. Nothing herein shall be construed as a recommendation to use any product in conflict with patents covering any material or its use. No license is implied or in fact granted under the claims of any patent.