

QUALITY ENABLES.

**Case study on removing PFAS
in a municipal drinking water plant, New Jersey, USA**

QUALITY WORKS.

LANXESS
Energizing Chemistry

Application of **Lewatit® TP 108 DW** in a full-scale municipal water treatment facility

Application

This case study presents the results of an analysis of the use of **Lewatit® TP 108 DW** for removal of per- and polyfluorinated alkyl substances (PFAS) at a full-scale municipal drinking water plant in New Jersey, USA. The gel type styrene/divinylbenzene-based high selective ion exchange resin was chosen as the media after pilot testing of various options.

Table 1: Key PFAS species in raw water

Sample date	PFOA	PFNA	PFBA	PFPeA	PFHxA	PFHpA
Jan. 2022	10.1	67.4	0.6	0.8	1.3	11.4
Nov. 2022	16.7	114.0	0.6	0.9	1.9	12.6
Feb. 2023	21.3	162.0	0.9	1.3	3.1	17.5
Average	16.0	114.5	0.7	1.0	2.1	13.8

Table 2: PFAS maximum contamination limits (MCLs)

Species	PFOA	PFOS	PFNA
New Jersey MCL, ppt	14	13	13
EPA drinking water MCL, ppt	4	4	10

All units are in ppt

Perfluorooctanoic Acid (PFOA), Perfluoropentanoic Acid (PFPeA), Perfluorononanoic Acid (PFNA), Perfluorohexanoic Acid (PFHxA), Perfluorobutanoic Acid (PFBA), Perfluoroheptanoic Acid (PFHpA)

System Design

The full-scale system included two parallel trains, with lead/lag configuration in each train. Each vessel was 8' x 12' in size and with 200 cu ft **Lewatit® TP 108 DW** resin. 5 µm cartridge filters were installed before the lead vessel to remove any suspended solids. The flow rate to each train fluctuated between 100 and 300 gpm depending on the season. Samples from the lead vessel were taken periodically from both the mid-vessel and end-vessel ports. The configuration of the vessel arrangement is shown in Figure 1, and the PFAS removal performance data is plotted in Figure 2.

Table 3: Key interfering species in raw water

Species concentrations					
Alkalinity ppm as CaCO ₃	Chloride ppm	Nitrite ppm	Nitrate ppm	Sulfate ppm	TOC ppm
109	34.8	0	0	44.9	0.136

X Lewatit®

Figure 1: Configuration of PFAS removal system in a New Jersey township


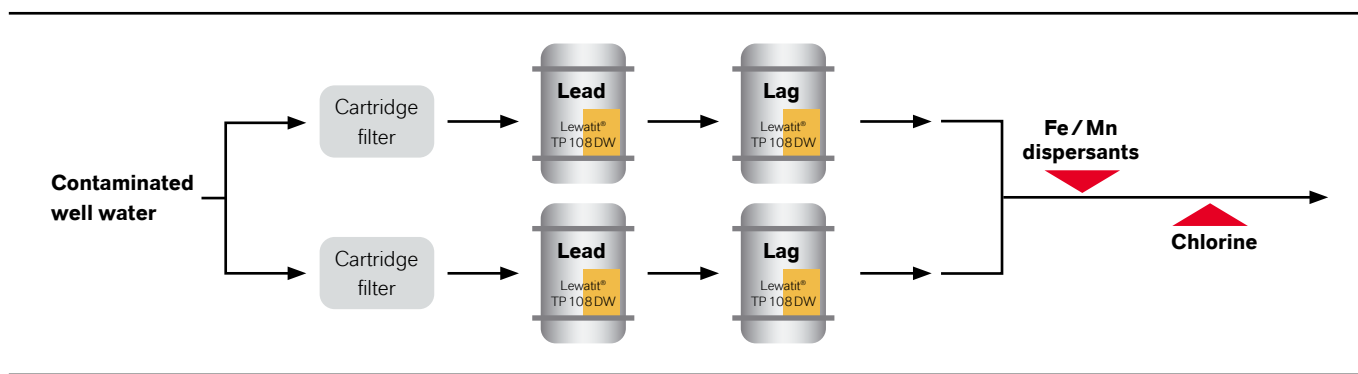


Figure 2: PFAS concentrations of samples taken at the effluent of the lead vessel

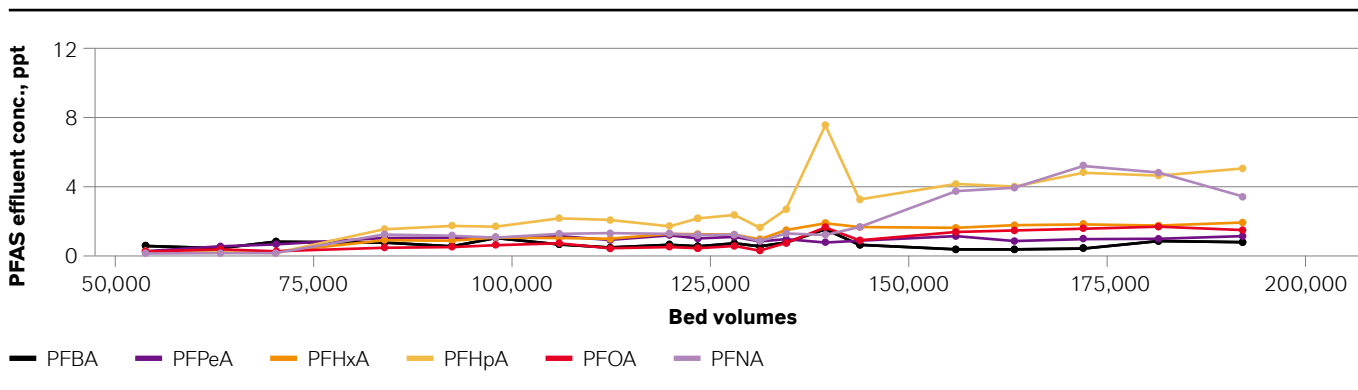

Conclusion

After nearly 200,000 bed volumes (BVs) and three years of successful operation, the lead vessel effluent was still meeting all MCLs for New Jersey, which is one of the most stringent in the USA, and the more stringent federal EPA drinking water MCLs. The mid-port data indicated the lead vessel could run for much longer beyond the 200,000 BVs.

However, at that time it was decided that the lead vessel would be removed for re-bedding and the lag vessel would be switched into the lead position. One benefit of the lead/lag configuration is that it allows maximum utilization of the resin bed capacity at the lowest overall operating cost.

We will be happy to support your business. Please contact us for additional information: visit www.lewatit.com



LANXESS Deutschland GmbH
 Liquid Purification Technologies
 Kennedyplatz 1
 50569 Cologne, Germany
 Phone: +49 221 8885 0
lewatit@lanxess.com

Health and Safety Information: Appropriate literature has been assembled which provides information concerning the health and safety precautions that must be observed when handling the LANXESS products mentioned in this publication. For materials mentioned which are not LANXESS products, appropriate industrial hygiene and other safety precautions recommended by their manufacturers should be followed. Before working with any of these products, you must read and become familiar with the available information on their hazards, proper use and handling. This cannot be overemphasized. Information is available in several forms, e.g., material safety data sheets, product information and product labels. Consult your LANXESS representative in Germany or contact the Regulatory Affairs and Product Safety Department of LANXESS Deutschland GmbH or – for business in the USA – the LANXESS Corporation Product Safety and Regulatory Affairs Department in Pittsburgh, PA, USA.

Regulatory Compliance Information: Some of the end uses of the products described in this publication must comply with applicable regulations, such as the FDA, BIR, NSF, USDA, and CPSC. If you have any questions on the regulatory status of these products, contact – for business in the USA – the LANXESS Corporation Regulatory Affairs and Product Safety Department in Pittsburgh, PA, USA or for business outside US the Regulatory Affairs and Product Safety Department of LANXESS Deutschland GmbH in Germany. The manner in which you use and the purpose to which you put and utilize our products, technical assistance and information (whether verbal, written or by way of production evaluations), including any suggested formulations and recommendations are beyond our control. Therefore, it is imperative that you test our products, technical assistance and information to determine to your own satisfaction whether they are suitable for your intended uses and applications. This application-specific analysis must at least include testing to determine suitability from a technical as well as health, safety, and environmental standpoint. Such testing has not necessarily been done by us. Unless we otherwise agree in writing, all products are sold strictly pursuant to the terms of our standard conditions of sale. All information and technical assistance is given without warranty or guarantee and is subject to change without notice. It is expressly understood and agreed that you assume and hereby expressly release us from all liability, in tort, contract or otherwise, incurred in connection with the use of our products, technical assistance, and information. Any statement or recommendation not contained herein is unauthorized and shall not bind us. Nothing herein shall be construed as a recommendation to use any product in conflict with patents covering any material or its use. No license is implied or in fact granted under the claims of any patent.

All trademarks are trademarks of the LANXESS Group, unless otherwise specified. Status 06/2024.